


**TOOLS REQUIRED:**

- Masking Tape
- Marking Pen
- Small Wood Block 1/2" Thick

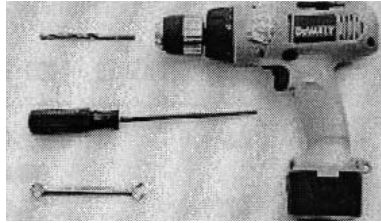

- Power Drill with 7/32" Drill Bit
- 8mm Wrench
- No. 2 Phillips Screwdriver

**PARTS LIST:**

| Part No.       | Description    | Qty. |
|----------------|----------------|------|
| 70-710057F-000 | Front of Front | 1    |
| 70-710057R-000 | Rear of Front  | 1    |

**Bag No. 446**

|               |                  |   |
|---------------|------------------|---|
| 42-423050-000 | Nut, M5          | 4 |
| 55-568212-000 | Screw, M5-8 x 12 | 4 |

**PREPARATION:**

1. Position motorcycle securely on its stand or a work stand.
2. Clean the fender thoroughly.

**INSTALLATION**

1. Cover the area of the fender where the Fender Tip goes with a thin layer of masking tape. Make certain the tape is smooth. **Figure 1.**
2. Carefully, position the front Fender Tip on the fender, make sure the Tip is centered on the fender. **Figure 2.**
3. Mark the hole locations with the marking pen. **Figure 3.**
4. Remove the Fender Tip.
5. Drill holes through the fender at the marks. **Due to close clearances between front fender and tire, place block of wood between the fender and the tire to avoid tire damage. Figure 4.**
6. Remove the masking tape.
7. Position the Fender Tip and insert the screws from the outside.
8. Install the nuts on the screws and tighten securely. **Figure 5.**
9. Repeat the above steps to install 70-710057R-000 Fender Tip to the **rear of the front fender.**

**MAINTENANCE**

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.



Figure 1.



Figure 2.



Figure 3.



Figure 4.

**Note:** Hold the drill so the drill bit goes into the fender straight.

Wood Block

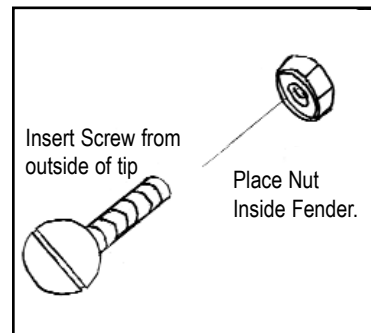



Figure 5.

**INSTALLATION INSTRUCTION**  
**CAST FENDER TIP for Kawasaki VN2000**  
**N7012 Rear Fender Tip**

**TOOLS REQUIRED:**

Masking Tape (Not shown)  
 Marking Pen (Not shown)

Power Drill with 7/32" Drill Bit  
 8mm Wrench  
 No. 2 Phillips Screwdriver

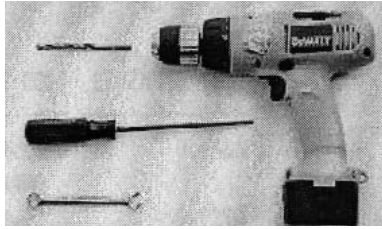

**PARTS LIST:**

| Part No.           | Description      | Qty. |
|--------------------|------------------|------|
| 70-710058-000      | Rear of Rear     | 1    |
| <b>Bag No. 447</b> |                  |      |
| 42-423050-000      | Nut, M5          | 2    |
| 55-568212-000      | Screw, M5-8 x 12 | 2    |

**PREPARATION:**

1. Position motorcycle securely on its stand or a work stand.
2. Clean the fender thoroughly.

**INSTALLATION**

1. Cover the area of the fender where the Fender Tip goes with a thin layer of masking tape. Make certain the tape is smooth. **Figure 1.**
2. Carefully, position the Rear Fender Tip on the fender, make sure the Tip is centered on the fender. **Figure 1.**
3. Mark the hole locations with the marking pen. **Figure 1.**
4. Remove the Fender Tip.
5. Drill holes through the fender at the marks. **Figure 2.**
6. Remove the masking tape.
7. Position the Fender Tip and insert the screws from the outside.
8. Install the nuts on the screws and tighten securely. **Figure 3.**

**MAINTENANCE**

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.



Figure 1. Tape Fender, Position Fender Tip, Mark Fender

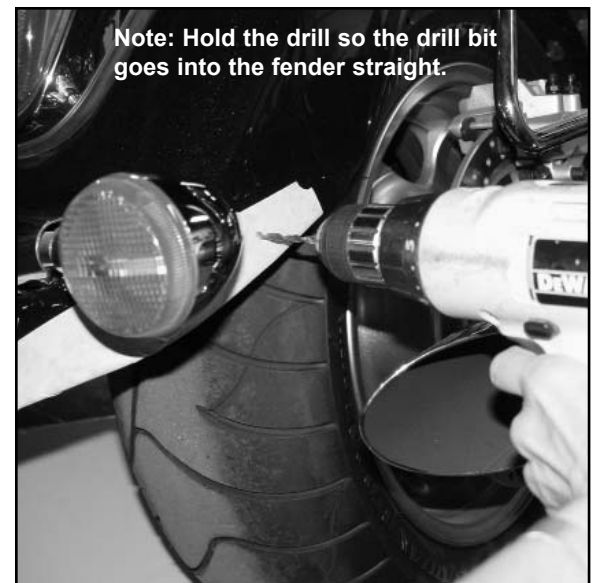


Figure 2.

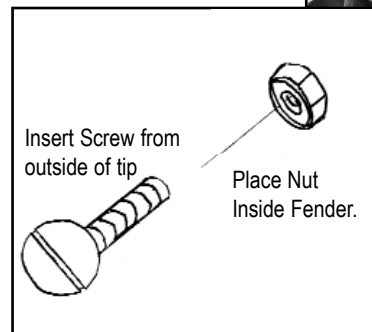
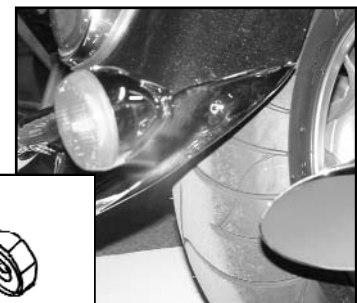


Figure 3.