



INSTALLATION OF SADDLE BAG TO FRAME

Rest the stainless steel clips attached to the outside of the bag to the lower section of the frame. Engage the quarter turn fastener to the frame. Push in and turn clockwise one quarter turn. There will be a slight spring pressure against the fastener, turn until it stops. Grap the side of the bag, wiggle it. The bag should be firmly set. If fastener is loose, repeat installation of bag to frame.



Rest clip on lower section of frame

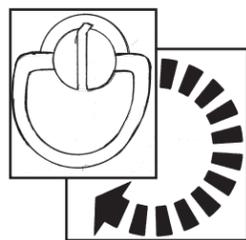

Turn clockwise one quarter turn.

Saddlebag Care: Wash with a mild soap or detergent and warm water. Use a soft cloth. To remove tar use naphtha or turpentine.



Painting: Lightly sand the surface with 600 grit sandpaper and spray lacquer, urathane or other paint.

Replacement Parts: Contact National Cycle, Inc.

WARNING

Not to exceed 11lbs (5kg) weight per bag. Do not exceed 80 mph (129 kph) when saddlebags are mounted.

On some motorcycles, additional accessories can reduce a motorcycle's stability and safe operation speed. Never ride a motorcycle that exhibits any unsafe handling characteristics. Remove all accessories and cargo at once. Have your dealer diagnose and solve the problem before remounting your accessories.

Remove the two forward screws from one Fender Strut (Wrench, 10mm).

Leave Backrest Side Support in place (if Backrest is to be installed).

Hold appropriate Saddlebag Frame (1) in place at Fender Strut

Thread M8 x 55 Screw (2) through front bushing, Fender Strut, and into Fender. **Place washer between Fender Strut and front Frame Bracket bushing if Backrest is used.**

Thread M8 x 55 Screw through rear bushing, **Backrest Support (if used)**, Fender Strut, then into Fender.

Tighten the Saddlebag Frame Mount screws to 22 ft/lbs (3.0m-kg) (Hex Key, 6mm)

Repeat on other side.

INSTALLATION INSTRUCTIONS SADDLE BAG FRAME TO KAWASAKI VN800B CLASSIC

Installation Kit SB102

10-111102 12/98



national cycle **CRUISELINER**™

Quality Is Reflected In Our Name

SADDLE BAG

NATIONAL CYCLE, INC.

PO Box 158

Maywood, IL 60153-0158 USA

708-343-0400 Fax:708-343-0625

E-Mail: info@nationalcycle.com

<http://www.nationalcycle.com>

Tools Needed


Wrench, 10mm

Hex Key Wrench, 6mm

Parts List

Index	Description	Qty.
1	Saddle Bag Frame Mount, Right	1
	Saddle Bag Frame Mount, Left	1
2	Screw, M8-1.25x55 Socket Head	4

WASHER, FLAT, M8X24X3.2 CHROME 2

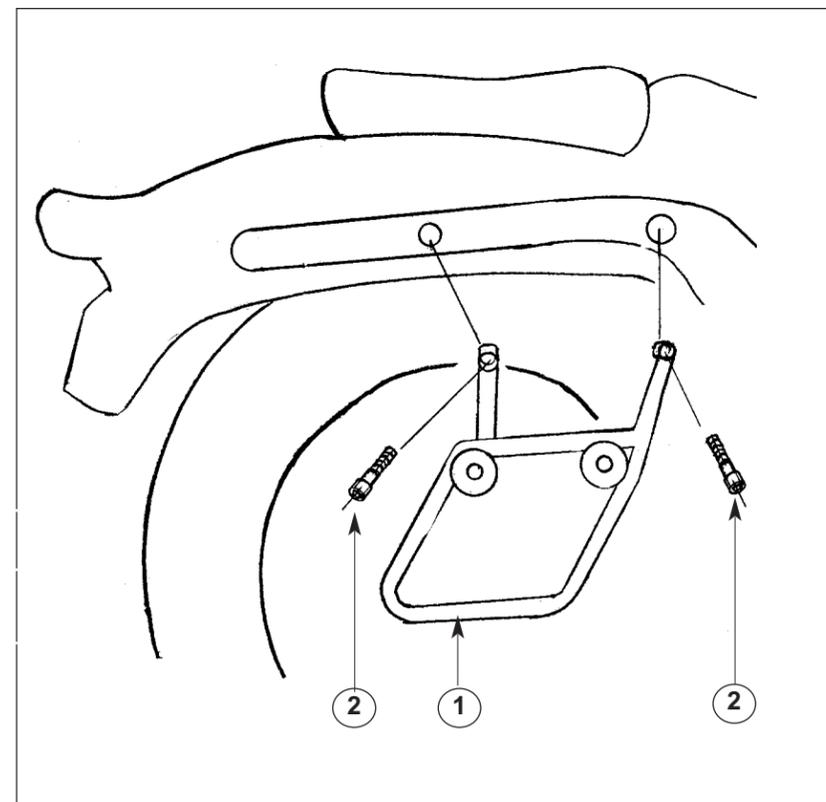

Remove the two forward screws from one Fender Strut (Wrench, 10mm).

Leave Backrest Side Support in place (if Backrest is to be installed).

Hold appropriate Saddlebag Frame (1) in place at Fender Strut

Thread M8 x 55 Screw (2) through front bushing, Fender Strut, and into Fender. **Place washer between Fender Strut and front Frame Bracket bushing if Backrest is used.**

Thread M8 x 55 Screw through rear bushing, **Backrest Support (if used)**, Fender Strut, then into Fender.

Tighten the Saddlebag Frame Mount screws to 22 ft/lbs (3.0m-kg) (Hex Key, 6mm)

Repeat on other side.


Tools Needed

Wrench, 10mm
Hex Key Wrench, 6mm

Parts List


Index	Description	Qty.
1	Saddle Bag Frame Mount, Right	1
	Saddle Bag Frame Mount, Left	1
2	Screw, M8-1.25x55 Socket Head	4

WASHER, FLAT, M8X24X3.2 CHROME 2

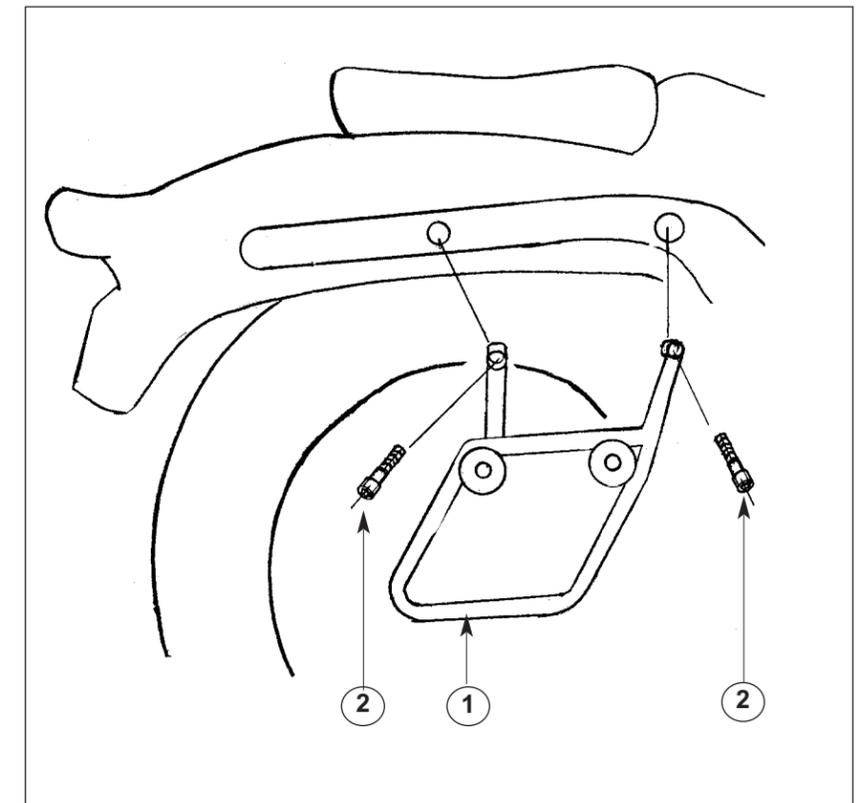


INSTALLATION OF SADDLE BAG TO FRAME

Rest the stainless steel clips attached to the outside of the bag to the lower section of the frame. Engage the quarter turn fastener to the frame. Push in and turn clockwise one quarter turn. There will be a slight spring pressure against the fastener, turn until it stops. Grap the side of the bag, wiggle it. The bag should be firmly set. If fastener is loose, repeat installation of bag to frame.



Rest clip on lower section of frame

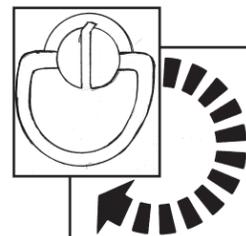

Turn clockwise one quarter turn.

Saddlebag Care: Wash with a mild soap or detergent and warm water. Use a soft cloth. To remove tar use naphtha or turpentine.



Painting: Lightly sand the surface with 600 grit sandpaper and spray lacquer, urathane or other paint.

Replacement Parts: Contact National Cycle, Inc.

WARNING

Not to exceed 11lbs (5kg) weight per bag. Do not exceed 80 mph (129 kph) when saddlebags are mounted.

On some motorcycles, additional accessories can reduce a motorcycle's stability and safe operation speed. Never ride a motorcycle that exhibits any unsafe handling characteristics. Remove all accessories and cargo at once. Have your dealer diagnose and solve the problem before remounting your accessories.

INSTALLATION INSTRUCTIONS SADDLE BAG FRAME TO KAWASAKI VN800B CLASSIC

Installation Kit SB102

10-111102 12/98



national cycle

Quality Is Reflected In Our Name

CRUISELINER™

SADDLE BAG

NATIONAL CYCLE, INC.

PO Box 158
Maywood, IL 60153-0158 USA
708-343-0400 Fax:708-343-0625
E-Mail: info@nationalcycle.com
http://www.nationalcycle.com