

**Parts List**

<b>Index</b>	<b>Part No.</b>	<b>Description</b>	<b>Qty.</b>
1	34-341312C-000	Frame Bracket, Left	1
2	34-341313C-000	Frame Bracket, Right	1
<b>Bag 874</b>			
3	51-515776-000	Screw Hex, M8-1.25 x 75	4
4	49-495573-000	Spacer 1.0 Length	4


**Tools Needed**

Hex Key Wrench 6mm

**INSTALLATION**

1. On right side loosen the two fender rail screws.
2. Remove the rear screw from one side.
3. Position spacer (see note below) into pocket at rear hole, start M8-1.25 x 75 screw through mount bracket and spacer then into fender. (6mm Hex Key)
4. Repeat for front screw and left side.
5. Tighten to: M8= 22 ft-lbs

**NOTE:** Do not use the rear spacers when mounting the Cruiseliner Saddlebag Frame together with a Paladin QuickSet Rack and Back Rest.

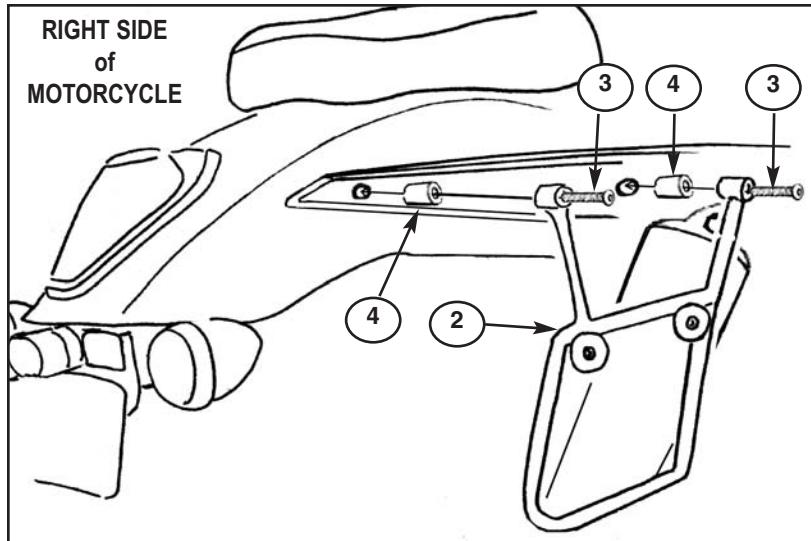
**INSTALLATION OF SADDLE BAG TO FRAME**


Rest the stainless steel clips attached to the outside of the bag to the lower section of the frame. Engage the quarter turn fastener to the frame. Push in and turn clockwise one quarter turn. There will be a slight spring pressure against the fastener, turn until it stops. Grab the side of the bag, wiggle it. The bag should be firmly set. If fastener is loose, repeat installation of bag to frame.

**Saddlebag Care:** Wash with a mild soap or detergent and warm water. Use a soft cloth. To remove tar use naphtha or turpentine.



**Painting:** Lightly sand the surface with 600 grit sandpaper and spray lacquer, urethane or other paint.

**Replacement Parts:** Contact National Cycle, Inc

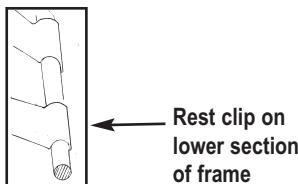

Rest clip on lower section of frame



Turn Fastener clockwise one quarter turn.


**WARNING**

Not to exceed 11 lbs (5kg) weight per bag. Do not exceed 80 mph (129 kph) when saddlebags are mounted.

On some motorcycles, additional accessories can reduce a motorcycle's stability and safe operating speed. Never ride a motorcycle that exhibits any unsafe handling characteristics. Remove all accessories and cargo at once. Have your dealer diagnose and solve the problem before remounting your accessories.