

PARTS LIST

| <u>Index</u> | <u>Description</u> | <u>Part No.</u> | <u>Qty.</u> |
|--------------|-----------------------------|-----------------|-------------|
| 1 | Shield, Hand Deflector | 20-231004-000 | 2 |
| 2 | Plate, Outside | 37-370900-000 | 2 |
| 3 | Nut, 1/4-20 Acorn | 42-480000-000 | 4 |
| 4 | Screw, 1/4-20 x 1/2, Nylon | 50-530500-000 | 4 |
| 5 | Bracket, Left | 37-370941-000 | 1 |
| 6 | Bracket, Right | 37-370942-000 | 1 |
| 7 | Washer, 5/16" Int. Lock | 49-492210-000 | 2 |
| 8 | Screw, 5/16"-24 x 1/2, Flat | 51-514504-000 | 1 |
| 9 | Washer, 3/8" x 3/16 | 49-490230-000 | 1 |
| 10 | Turn Signal Retainer | 42-425010-000 | 1 |
| 11 | Neoprene Washer | 75-762010-000 | 4 |

NOTE: Left and right side of motorcycle are determined from rider's perspective while sitting on motorcycle.

PREPARATION Pre-assemble parts

1. Identify the Right and Left Brackets, items 6 and 5 using the diagrams at right.

2. **Select the Right Bracket**, item 6 and attach to Hand Deflector Shield as shown. Insert the Screws from the **INSIDE** of the Shield. Place Washers and Outside Plate over the Screws and secure with the Nuts. Tighten until snug, do not over-tighten.

(Screwdriver)

3. **Select the Left Bracket**. Attach item (10), Turn signal Retainer to Bracket using the Flat Head Screw (8) and Washer (9) as shown. **(Hex Key and 5/8" Wrench)** Attach Bracket Assembly to a Hand Deflector Shield using same procedure as with the Right side in Preparation step 2.



Tools used in all installations:


Wrench, 1/2"
Hex Key, 3/16"
Wrench 7/16"
Wrench, 5/8"
Screwdriver, 3/8" Flat

MAINTENANCE


To clean the plastic, wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dish washing liquid. Flannel or soft chamois make good cleaning cloths.

Paint, glue residue or grease removal:

Moisten cotton with Naphtha or Turpentine followed by a wash as above.

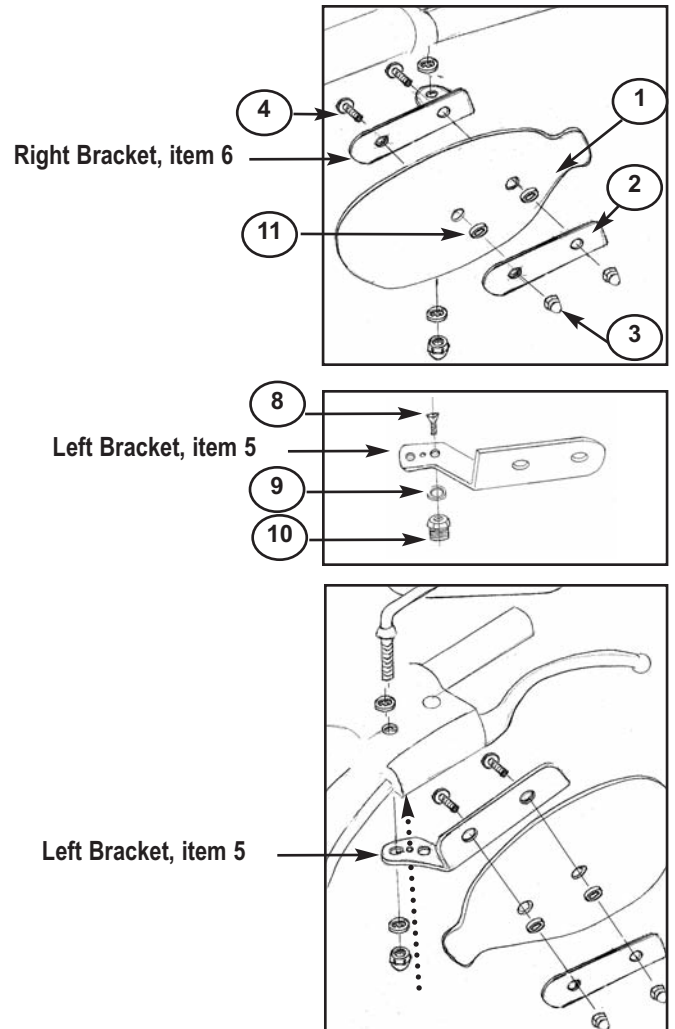


RIGHT SIDE HAND DEFLECTOR ASSEMBLY

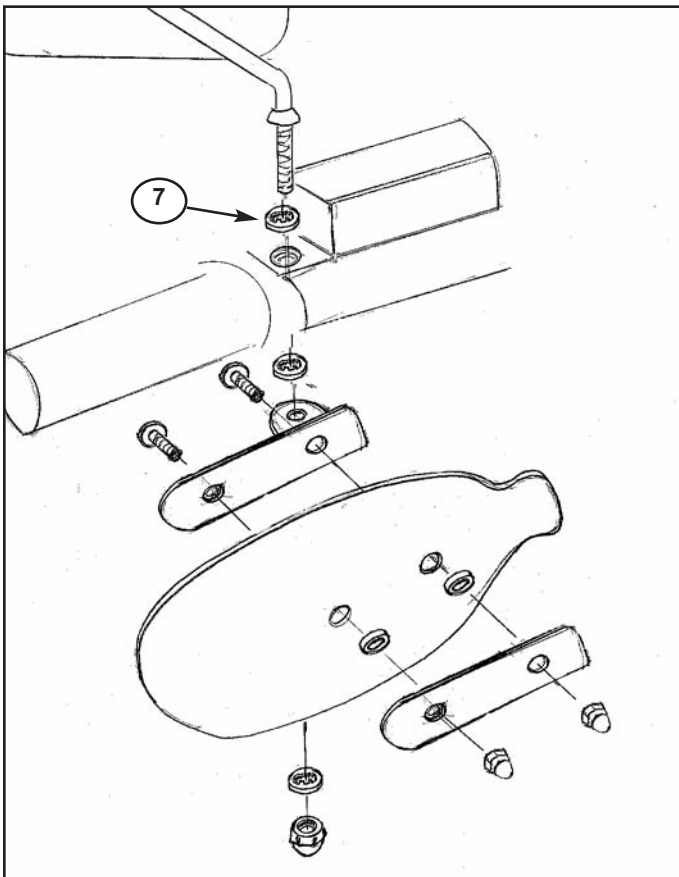

1. Remove the right mirror, (Wrench, 1/2"). Retain the stock nut and washers.
2. Place a Lock Washer (7) between the Bracket and the brake lever perch.
3. Position the right Hand Deflector assembly onto the mirror stem from below the handlebar.
4. Install the original nut and lock washer onto the mirror stem, finger tight.
5. Adjust the Hand Deflector and mirror.
6. Tighten the mirror nut to 12 ft-lbs. torque.

LEFT SIDE HAND DEFLECTOR ASSEMBLY

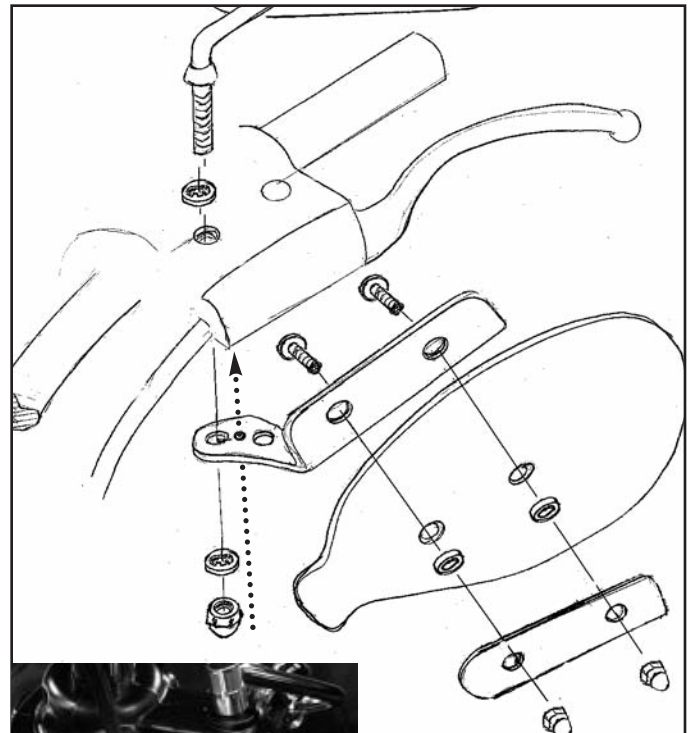

Stock Turn signal
Retainer Bracket

1. Remove the left mirror. (**Wrench 1/2"**) Retain the stock nut and washers.
2. Remove the turn signal from the **stock** turn signal retainer bracket shown in above photo. Store retainer bracket in a safe place. It will not be re-used.
3. Position the left Hand Deflector Assembly onto the mirror stem from below the handlebar. **Make sure the small hole in the Hand Deflector Bracket aligns with the alignment pin in the clutch lever perch.**
4. Install the original nut and lock washer onto mirror stem.
5. Adjust the left mirror and tighten the nut to 12 ft-lbs. torque.
6. Reinstall the left turn signal into the Turn Signal Retainer.