

**SwitchBlade Deflector™ Windshield  
Quantum® Hardcoated Polycarbonate**

**This installation manual covers Kit UQ01, Kit UQ05 and Kit UQ07**

**Dealers:** If installing this windshield for a customer, please give them this manual. It contains information needed to properly maintain and use this product.

The SwitchBlade Deflector is intended for use with the correct QuickSet4™ mount kit for your motorcycle. At any time you may interchange windshields with the 2-Up® or Shorty® using the same mount kit. *All Patents Pending.*

**Attention**



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

**Note:**



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

**Parts List For: Kit UQ01, Kit UQ05, Kit UQ07**

*Note: Your specific Mount Bracket number is specified in Index 1 and 2.*



The items pre-assembled to the windscreen are properly tightened using thread lock. Do not adjust.

INDEX	PART NO. AND DESCRIPTION	QTY.
1	37-371931-000 Mount Bracket, Left <b>KIT UQ01</b>	1
1	37-371935-000 Mount Bracket, Left <b>KIT UQ05</b>	1
1	37-371937-000 Mount Bracket, Left <b>KIT UQ07</b>	1
2	37-371932-000 Mount Bracket, Right <b>KIT UQ01</b>	1
2	37-371936-000 Mount Bracket, Right <b>KIT UQ05</b>	1
2	37-371938-000 Mount Bracket, Right <b>KIT UQ07</b>	1

**BAG 761 Contained in KIT UQ01, UQ05, UQ07**

3	55-586043-000 Bolt, Carriage 5/16"-18 x 5/8"	4
4	42-482201-000 Nut, Hex Cap 5/16 - 18	4

**Preparation**

Position the motorcycle securely on its stand or a work stand. Cover the front fender and fuel tank with a suitable cloth to avoid scratches from dropped tools.



Left and right side of motorcycle and product are determined while sitting on the bike.



1, 9/16" Socket  
1, Socket Wrench

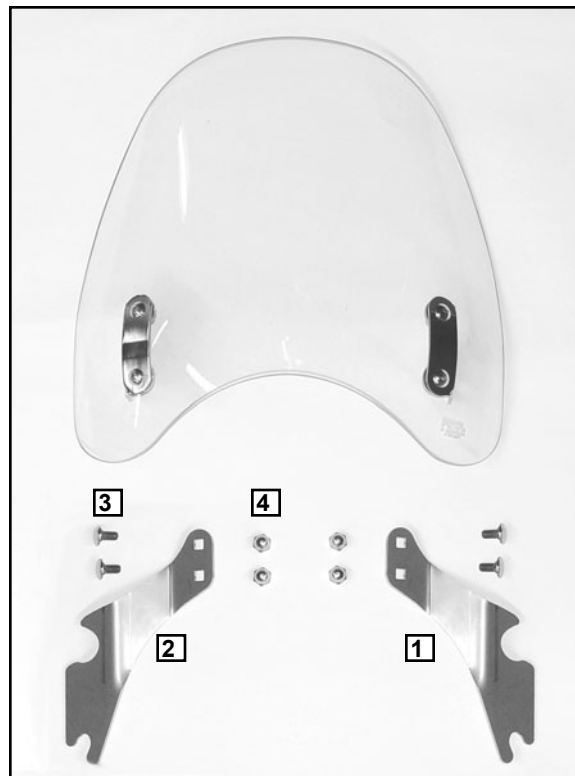



Figure 1.

**INSTALLATION**  
**ATTACH THE BRACKETS TO THE WINDSHIELD**

 When properly identified and installed, Bracket bends outboard. Bracket mounts outboard to the pre-assembled windshield mount as well.

1. Identify right side Bracket (2).
2. Assemble right Bracket to right side of windshield with Carriage Bolts (3) and Nuts (4). Be certain Bolt neck seats correctly in Bracket. **(9/16 Socket and Wrench) Figure 2.**

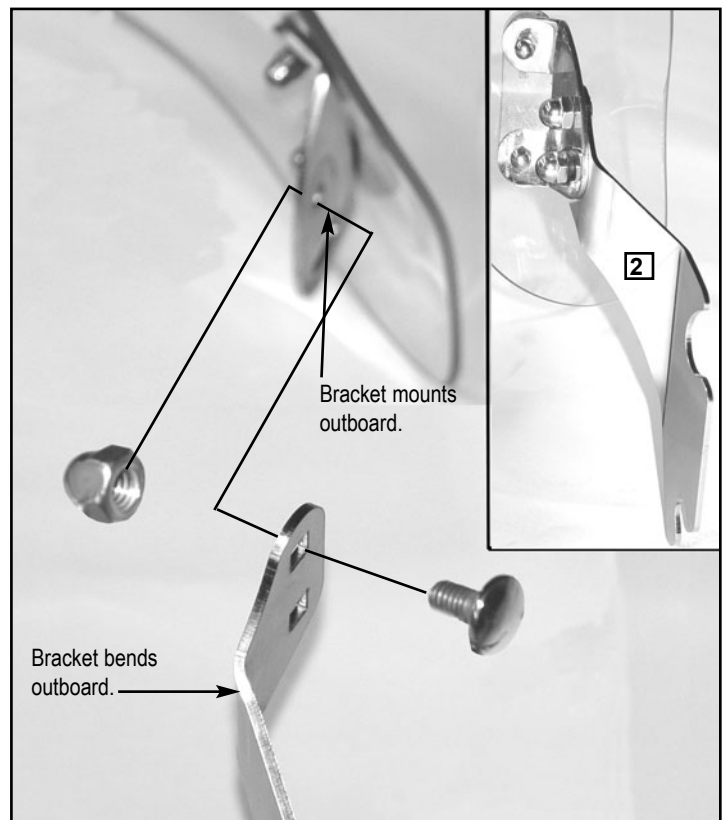


Figure 2. Right Side Bracket Assembly

**ADJUST BRACKETS, TIGHTEN TO "HOLD"**

3. Repeat on left side. For now, adjust Brackets so notched edge is perpendicular to the ground and screen has a slight rake. Tighten to hold. **Figure 3.**

**INSTALL WINDSHIELD TO MOTORCYCLE, ADJUST AND TIGHTEN SECURLY**

4. Refer to the SwitchBlade Owner's Manual attached to the windshield and install shield to motorcycle. Make final adjustments to rake and tighten Nuts (4) firmly (15 ft/lbs.) **(9/16 Socket and Wrench)**

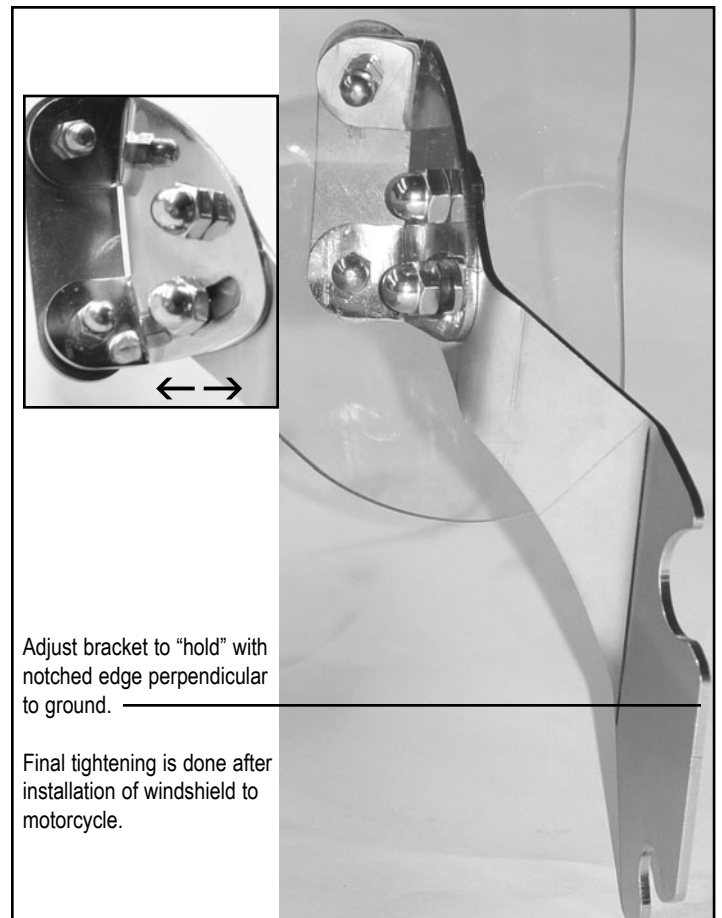


Figure 3.