

Attention



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

Note:



Tips for facilitation of operation, control and adjustment, as well as maintenance work.



TOOLS REQUIRED:

- 10mm Box Wrench
- 5mm Hex Key
- Phillips Screw Driver

PARTS LIST

<u>Index</u>	<u>Description</u>	<u>Qty.</u>
1	Windshield, Quantum Hardcoated polycarbonate	1

REMOVAL AND RE-INSTALLATION



Retain all fasteners and parts as they will be reused.



Installation of windshield will be in reverse of removal.



Position stock windshield in highest position.

1. Move mirror forward. Lift rubber sleeve to expose inside attachment point. Repeat on opposite side.

2. Gently pry "bracket" over hex bolt to in order to remove hardware holding front body panel in place. Repeat on opposite side. **Figure 1. (10mm Box Wrench)**



To avoid hardware dropping into mirror cavity stuff a small cloth under hardware! Item (A)

3. Remove hardware holding front panel in place. Repeat on opposite side.



Figure 1



Figure 2

REMOVAL AND RE-INSTALLATION CONTINUED

 Position mirror back (toward rider) in order to remove front panel. Repeat on opposite side. **Figure 3**

4. Unsnap front panel. **Figure 4.**

5. Remove front and side hardware holding windshield in place. **Figure 5 and 6 (5mm Hex Key and Phillips Screw Driver)**

6. Remove stock windshield.



Figure 3



Figure 4



Figure 5


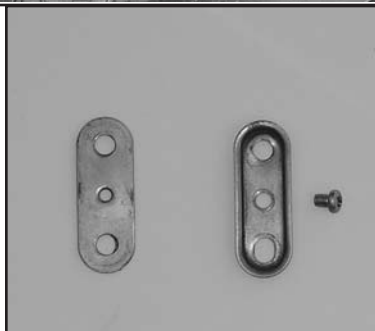


Figure 6

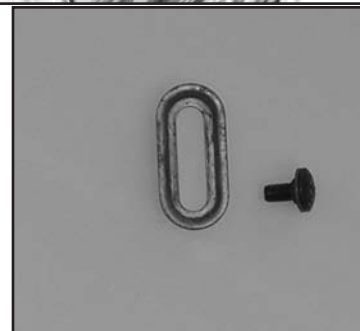

REMOVAL AND RE-INSTALLATION CONTINUED

6. Remove vent from stock windshield and install into VStream windshield (for N20012A only). **Figure 7 (5mm Hex Key)**
7. Install VStream windshield in reverse order.
8. Tighten all fasteners securely. Check operation of VStream windshield.

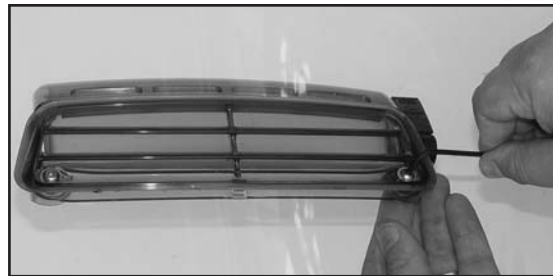


Figure 7

MAINTENANCE

Cleaning: Wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dish-washing liquid. Flannel or soft chamois make good cleaning cloths. Do not use rain protective products on the screen due to the solvent action of the alcohol in these products. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

National Cycle Windshield Wash Part number N1401 is recommended for everyday cleaning. Product is supplied with a handy travel size container and rag for easy storage on the motorcycle. Ask your local dealer or visit: www.nationalcycle.com

WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.