

Thank you for purchasing a ZTechnik product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windshield for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.


Description:	VStream® Replacement Windscreen	Model:	2015-20 BMW® R1200RS/R1250RS
Part Number:	Z2373Z2374/Z2375	Installation Time:	20 min. Difficulty Level: Easy

#### PARTS LIST

ITEM	DESCRIPTION	QTY.
A	VStream Windscreen	1
<b>BAG#1217</b>		
B	49-495281-000 Bushing, Large, Top	2
C	49-495282-000 Bushing, Small, Bottom	2
D	51-514119-000 Hex Screw, M5x25, Stainless	2
E	51-514142-000 Hex Screw, M5x45, Stainless	2
F	34-346048-000 Cap, Black	4
G	44-447350-000 Grommet	4

#### TOOLS REQUIRED

T-25 Torx Wrench  
3mm Allen Wrench

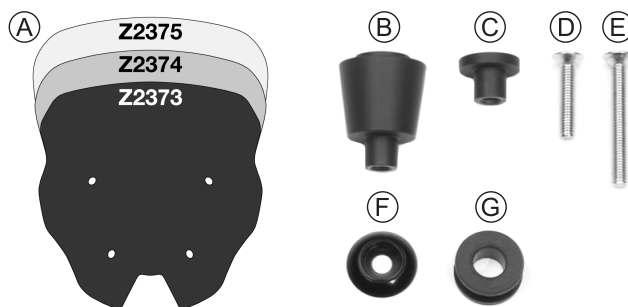

**ATTENTION:** Special notes and cautionary measures which can prevent damage to the accessory or vehicle.



**NOTE:** Tips for facilitation of operation, control and adjustment, as well as maintenance work.

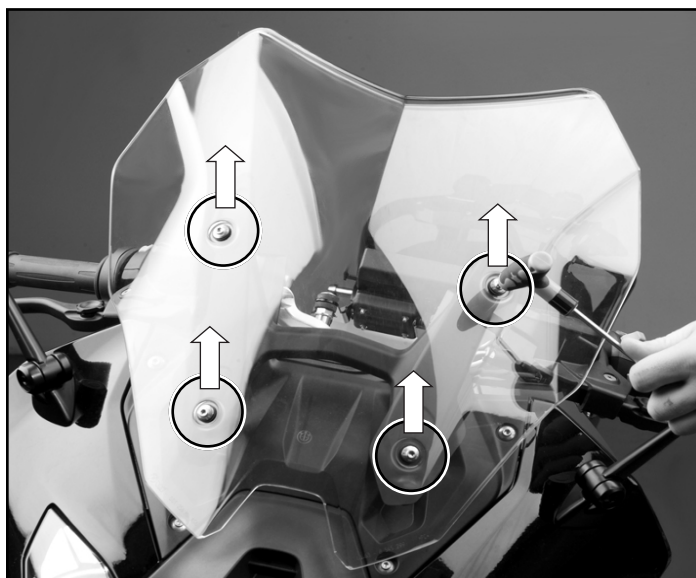


Figure 1

## PREPARATION

Place motorcycle securely on its centerstand.

## OEM WINDSCREEN REMOVAL

### Figure 1

With a T-25 Torx Wrench, loosen and remove the four screws holding the OEM Windscreen to the mounting bracket. Remove the OEM Windscreen.

OEM hardware will not be reused.

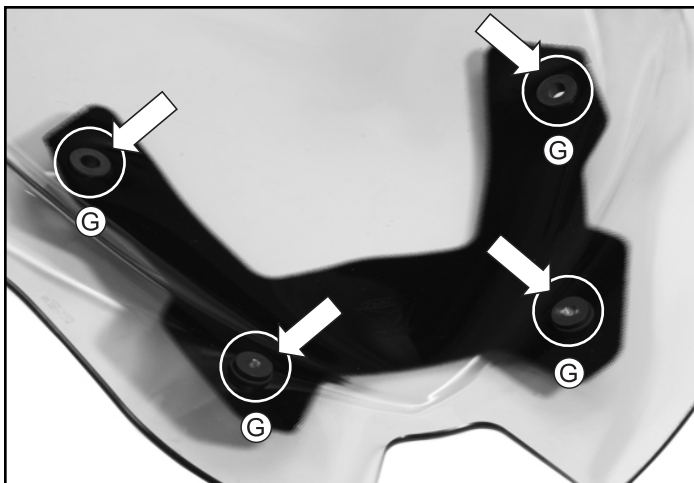


Figure 2

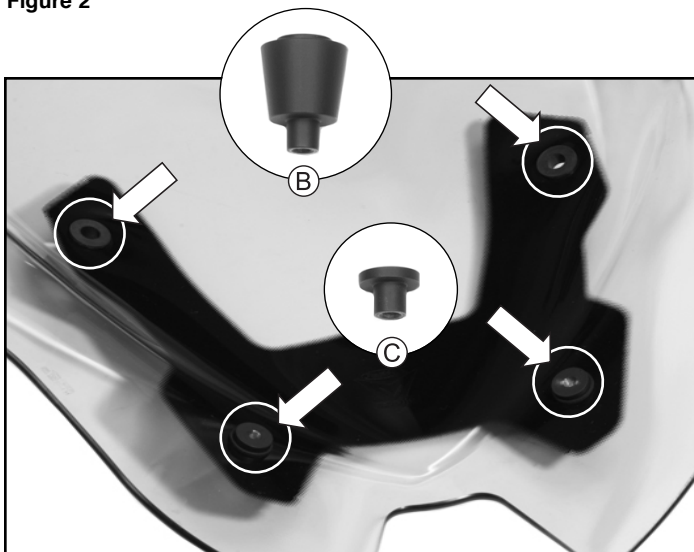


Figure 3

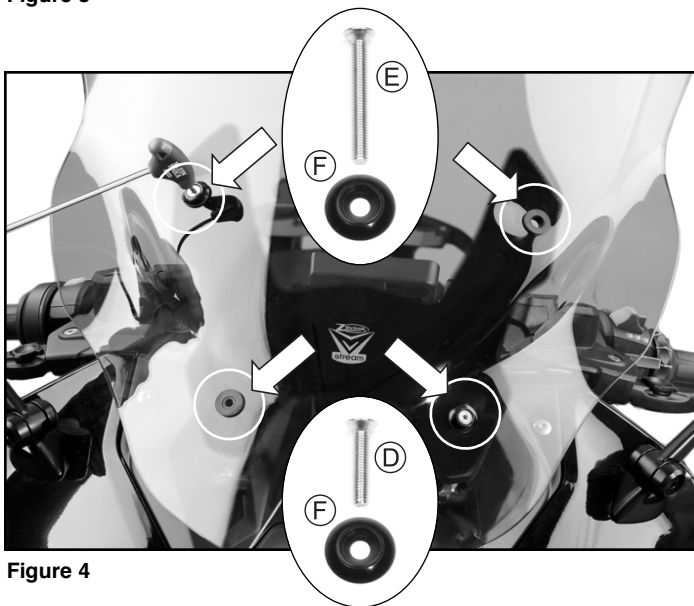


Figure 4

## INSTALLATION

### Install Grommets and Bushings into Windscreen

#### Figure 2

Insert one Grommet (G) into each hole in windscreen.

#### Figure 3

Insert a Large Bushing (B) into each of the two Grommets in the top two holes of the Windscreen.

Insert a Small Bushing (C) into each of the two Grommets in the bottom two holes of the Windscreen.

### Install Windscreen onto Motorcycle

#### Figure 4

Secure the Windscreen to the OEM mount points at the two top hole locations with two Caps (F) and two M5x45 Screws (E).

In the bottom two top hole locations, insert two Caps (F) and two M5x25 Screws (D).

Using a 3mm Allen Wrench, tighten all four screws securely but do not overtighten.

*Ride safe and enjoy your new VStream Windscreen!*



## CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle Shield Wash™ (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

## RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's RainZip® (N1410-01) to keep your windscreen clear in rainy weather.



Register Your Windshield Online at [www.nationalcycle.com](http://www.nationalcycle.com)

### ZTechnik by National Cycle 3-Year Limited Warranty

National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windscreen. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields.

Visit [www.nationalcycle.com](http://www.nationalcycle.com) for further details or e-mail National Cycle.

## WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

**Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycles instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.**