



Quantum® Hardcoated Polycarbonate  
VStream+® Windscreen for 2025-up  
Yamaha® MT-07



N20352 Dark Tint, Sport  
N20353 Light Tint, Sport-Tour  
N20354 Clear, Touring

VStream+®

VStream® Windscreen Patent No. 7,387,328

Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windshield for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.

Description:	VStream+® Windscreen	Model:	2025-up Yamaha® MT-07
Part Number:	N20352 / N20353 / N20354	Installation Time:	45-60 min. Difficulty Level: Intermediate

**Package Contents**


Item	Part No.	Description	QTY.
A		Windscreen; 3.0mm Polycarbonate	1
B	37-370273-000	VStream+ Mounting Bracket; Left	1
C	37-370272-000	VStream+ Mounting Bracket; Right	1

**BAG#1453**

D	51-514221-000	M6x20 Stainless Steel Flat Head Screw	4
E	42-483005-000	M6 Flanged Cap Nut	4
F	34-346018-000	Aluminum Tophat Black	4
G	34-345608-000	Stainless Steel Headlight Bushing	2
H	44-448576-000	Rubber Trim Insert	2

**TOOLS REQUIRED**

4mm Allen Key  
5mm Allen Key  
10mm Box Wrench

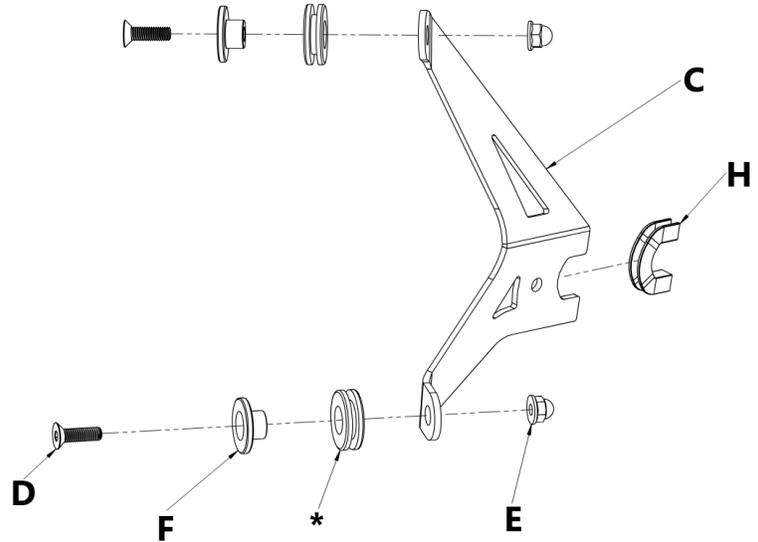

**ATTENTION:** Special notes and cautionary measures which can prevent damage to the accessory or vehicle.



**NOTE:** Tips for facilitation of operation, control and adjustment, as well as maintenance work.



**Step 1**

**PREPARATION**

Place motorcycle securely on its sidestand.



**Place a blanket over the motorcycle's front fender to keep it from being scratched.**

Check all the Windscreen Mounting Kit's parts and make sure you have everything at hand and sorted out.

Make sure you have the required tools available.

**DISASSEMBLY**

**Step 1**

Remove both upper cowl screws and corresponding washers.



**These will be reused**



Step 2

## DISASSEMBLY; CONT'D.

### Step 2

Pull the front headlight cowl forward, then remove the OEM compression limiter and grommet.

 *These will not be reused*




Step 3

## ASSEMBLY

### Step 3

Insert the provided Stainless Steel Headlight Bushing (**G**) into the stock headlight cowl with the larger diameter portion facing inward.

 *These will need to be installed from inside of the cowl*

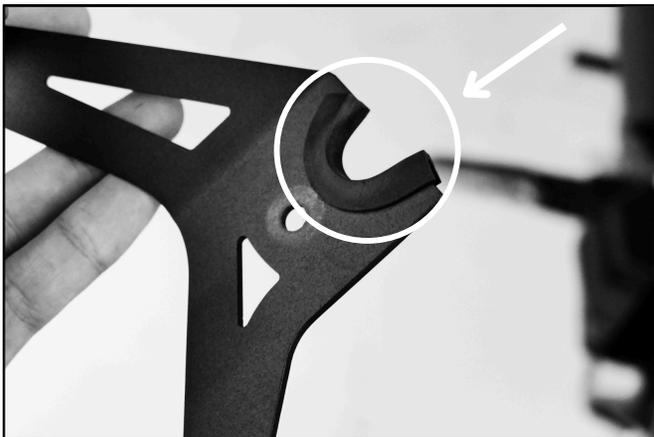

Step 5

### Step 4


Re-position the headlight cowl back onto OEM mounting points. Insure the Stainless Steel Headlight Bushings remain in place when doing so.

### Step 5

Install the Rubber Trim Inserts (**H**), into the left and right hand side VStream+ Mounting Brackets (**B**) and (**C**).



**Step 6**

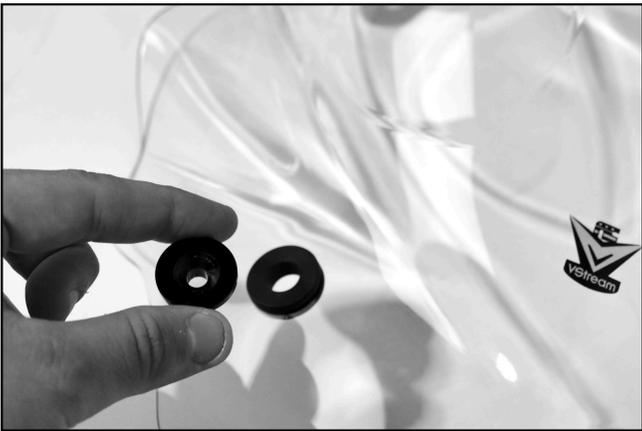

**Step 7**



**Step 8-9-10**



**Step 8-9-10**

## **ASSEMBLY Cont.**

### **Step 6**

Install both mounting brackets **(B)** and **(C)** onto the motorcycle using the OEM screws and washers. Tighten these hand tight and be sure not to pinch the rubber trim inserts **(H)** when mounting.

### **Step 7**

Install the 4 Aluminum Tophats Black **(F)** into the pre-installed windshield grommets.

### **Step 8**

Install windshield onto the mounting brackets top holes first using 1 Stainless Steel Flat Head screw **(D)** and 1 M6 Flanged Capnut **(E)** in each upper mounting hole. Do not fully tighten

### **Step 9**

Repeat the same process for the lower mount points using the same hardware as listed above

### **Step 10**

Tighten all windshield mounting hardware. (Stainless Steel Flat Head Screws **(D)** and Flanged Capnuts **(E)**).



**Step 11**

Give a slight push on the windshield rearward to ensure proper positioning.

**Step 12**

Tighten OEM Cowl screws in Mounting Brackets (**B** and **C**).

**Step 13**

Check all fasteners for tightness and ensure that the fitment is complete.

***Your windshield installation is now complete.***

***Ride safe and enjoy the performance benefits of your new VStream+® Windscreen!***

***E-mail us a photo of your MT-07 with your new VStream+ Windscreen to [info@nationalcycle.com](mailto:info@nationalcycle.com) and let us know what you think of it!***





## CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle Shield Wash™ (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

## RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's RainZip® (N1410-01) to keep your windscreen clear in rainy weather.



**Register Your Windshield Online at [www.nationalcycle.com](http://www.nationalcycle.com) National Cycle 3-Year Limited Warranty** National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windscreen. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields. Visit [www.nationalcycle.com](http://www.nationalcycle.com) for further details, or call 708-343-0400 or e-mail [info@nationalcycle.com](mailto:info@nationalcycle.com).

## WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycle's instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.