


TOOLS REQUIRED:

- Masking Tape (Not shown)
- Marking Pen (Not shown)
- Power Drill with 7/32" Drill Bit
- 8mm Wrench
- No. 2 Phillips Screwdriver

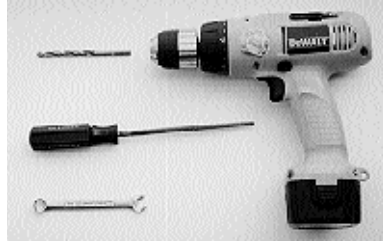

PARTS LIST:

Part No.	Description	Qty.
70-710048F-000	Front of Front	1
70-710048R-000	Rear of Front	1

Bag No. 314

42-423050-000	Nut, M5	4
49-490531-000	Washer, Flat #10	4
55-568220-000	Screw, M5-8 x 20	4

PREPARATION:

1. Position motorcycle securely on its stand or a work stand.
2. Clean the fender thoroughly.



Figure 1.

INSTALLATION

1. Cover the area of the fender where the Fender Tip goes with a thin layer of masking tape. Make certain the tape is smooth. **Figure 1.**
2. Carefully, position the front Fender Tip on the fender, make sure the Tip is centered on the fender. **Figure 2.**
3. Mark the hole locations with the marking pen. **Figure 3.**
4. Remove the Fender Tip.
5. Drill holes through the fender at the marks. **Figure 4.**
6. Remove the masking tape.
7. Position the Fender Tip and insert the screws from the outside.
8. Install the washers and nuts on the screws and tighten securely. **Figure 5.**
9. Repeat the above steps to install 70-710048R Fender Tip to the Rear of the Front Fender.



Figure 2.



Figure 3.

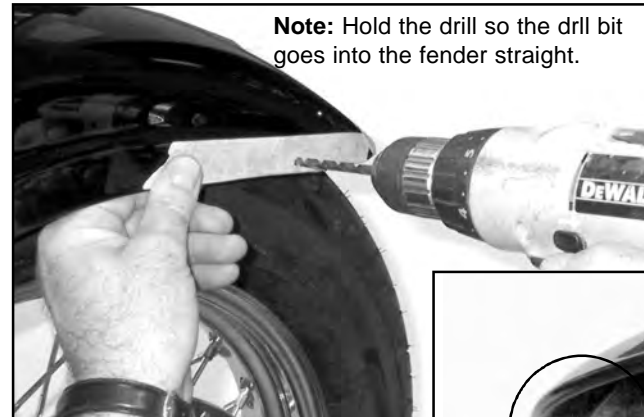


Figure 4.



Drill Straight, the drill hole will be through the ridge. The washer will hold screw tight.

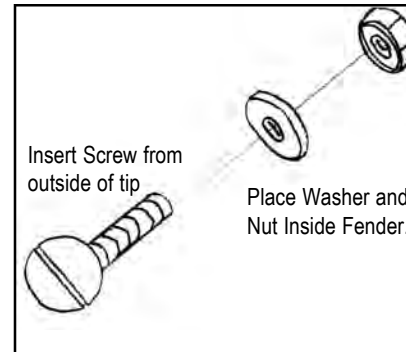


Figure 5.


MAINTENANCE

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.

INSTALLATION INSTRUCTION
CAST FENDER TIP for Suzuki VL800 Volusia
N7008 Rear Fender Tip

TOOLS REQUIRED:

- Masking Tape (Not shown)
- Marking Pen (Not shown)
- Power Drill with 7/32" Drill Bit
- 8mm Wrench
- No. 2 Phillips Screwdriver

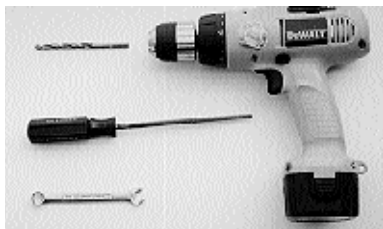

PARTS LIST:

Part No.	Description	Qty.
70-710049-000	Rear of Rear	1
Bag No. 315		
42-423050-000	Nut, M5	2
49-490531-000	Washer, Flat #10	2
55-568216-000	Screw, M5-8 x 16	2

PREPARATION:

1. Position motorcycle securely on its stand or a work stand.
2. Clean the fender thoroughly.

INSTALLATION

1. Cover the area of the fender where the Fender Tip goes with a thin layer of masking tape. Make certain the tape is smooth. **Figure 1.**
2. Carefully, position the Rear Fender Tip on the fender, make sure the Tip is centered on the fender. **Figure 1.**
3. Mark the hole locations with the marking pen. **Figure 2.**
4. Remove the Fender Tip.
5. Drill holes through the fender at the marks. **Figure 3.**
6. Remove the masking tape.
7. Position the Fender Tip and insert the screws from the outside.
8. Install the washers and nuts on the screws and tighten securely. **Figure 4.**



Figure 1.



Figure 2.



Figure 3.

Note: Hold the drill so the drill bit goes into the fender straight.

MAINTENANCE

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.

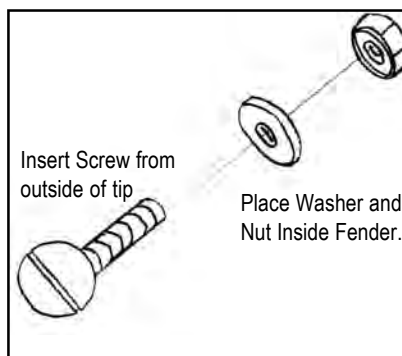


Figure 4.