

TOOLS REQUIRED:

- Masking Tape
- Marking Pen
- Small Wood Block 1/2" Thick

- Power Drill with 7/32" Drill Bit
- 8mm Wrench
- No. 2 Phillips Screwdriver

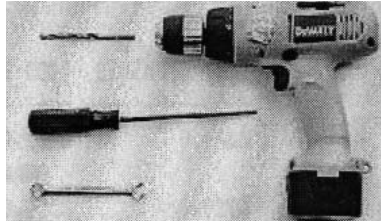


Figure 1.

PARTS LIST:

Part No.	Description	Qty.
70-710053-000	Front of Front	1
70-710054-000	Rear of Front	1

Bag No. 446

42-423050-000	Nut, M5	4
55-568212-000	Screw, M5-8 x 12	4

PREPARATION:

1. Position motorcycle securely on its stand or a work stand.
2. Clean the fender thoroughly.

INSTALLATION

1. Cover the area of the fender where the Fender Tip goes with a thin layer of masking tape. Make certain the tape is smooth. **Figure 1.**
2. Carefully, position the front Fender Tip on the fender, make sure the Tip is centered on the fender. **Figure 2.**
3. Mark the hole locations with the marking pen. **Figure 3.**
4. Remove the Fender Tip.
5. Drill holes through the fender at the marks. **Due to close clearances between front fender and tire, place block of wood between the fender and the tire to avoid tire damage. Figure 4.**
6. Remove the masking tape.
7. Position the Fender Tip and insert the screws from the outside.
8. Install the nuts on the screws and tighten securely. **Figure 5.**
9. Repeat the above steps to install 70-710054-000 Fender Tip to the **rear of the front fender.**



Figure 2.



Figure 3.



Figure 4.

Note: Hold the drill so the drill bit goes into the fender straight.

Wood Block

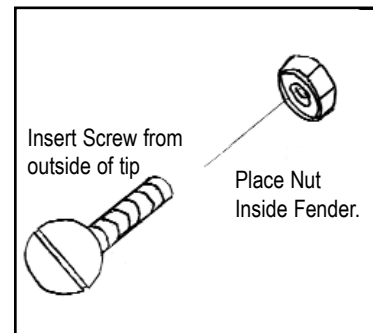


Figure 5.

MAINTENANCE

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.