



**INSTALLATION AND OWNER'S MANUAL
Z8890 and Z8991 Carbon Fiber Fuel Cap Trim**

**Rear Rack Kits As Listed On Page 2: Z8901, R1200R
Z8911, K1200 GT, Z8941, R1200 GS and Z8912 K16 GT/GTL**

PARTS LIST

Z8890 contains:

Fuel Cap Trim Kit 1Kit, 3 pcs.
Alcohol Wipe 1

Z8991 contains:

Fuel Cap Trim Kit 1Kit, 3 pcs.
Alcohol Wipe 1

Qty.



Cleaning Cloth for motorcycle surface
Hand Held Hair Dryer, 1500 Watt
Tweezers
Soft Cloth for wiping carbon fiber piece

PREPARATION

1. Thoroughly clean the motorcycle's surface around the fuel cap or rack. First wash the area, as you would normally clean the motorcycle.

NOTE: Cleaning is critical. Be sure to remove all wax, cleaners, and protectants (Armor-All). These can contaminate the adhesive causing it to fail.

2. After drying with the paper towels, clean again with the alcohol wipes. Do not apply wax or polish to the area cleaned.

INSTALLATION

1. Test fit the cover pieces on the gas cap or rack to verify their location. Do this before removing any adhesive mask.

CAUTION

-Do not use heat guns or open flame to warm the pieces or the motorcycle, they produce too much heat and may create a fire hazard.

-Warming temperature is critical for the best performance and adhesion. Installing a warm piece onto a cold surface is not recommended.

2. Warm the motorcycles fuel cap or rack surface to about 100° F (37° C) (hair dryer).

3. Warm the kit piece to 100° F (37° C) (hair dryer).

4. When everything is warm, carefully remove the masking from the adhesive side of the product. (If installing a fuel cap trim, do one piece at a time) (tweezers).

5. Position the piece(s) in place.

6. If it is necessary to reposition any piece, warm the piece and slowly peel it from the surface. Be careful not to stretch or over bend the piece.


7. Once the pieces are correctly positioned, firmly, but carefully, press the pieces onto the warm surface.

8. Once properly positioned, and still warm, carefully use the soft cloth to press the piece onto the surface until it is completely adhered.

9. After 24 hours, the adhesive on the kit will have set completely and it will be permanently installed.



FUEL CAP KIT Z8890

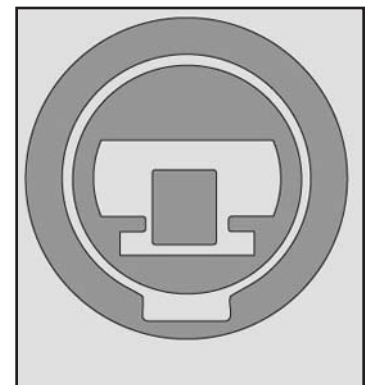

**FUEL CAP
KIT Z8891**

MAINTENANCE

Page 2.

PARTS LIST

Z8901 contains:

Rear Rack Kit 1 Piece Kit
Alcohol Wipe 1

Z8911 contains:

Rear Rack Kit 1 Piece Kit
Alcohol Wipe 1


Z8912 contains:

Rear Rack Kit 1 Piece Kit
Alcohol Wipe 1

Z8941 contains:

Rear Rack Kit 1 Piece Kit
Alcohol Wipe 1


Qty.

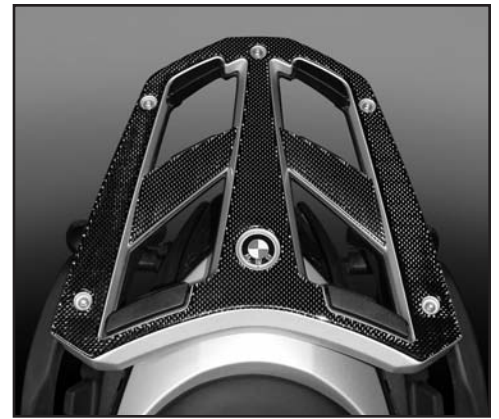


**REAR RACK KIT
Z8901**

MAINTENANCE


Clean and polish the dash panel pieces with Turtle Wax® vinyl fabric upholstery cleaner and protector. Spray wax or cleaner on cloth and wipe the carbon fiber covers. Never apply waxes or cleaners directly to the carbon fiber covers.

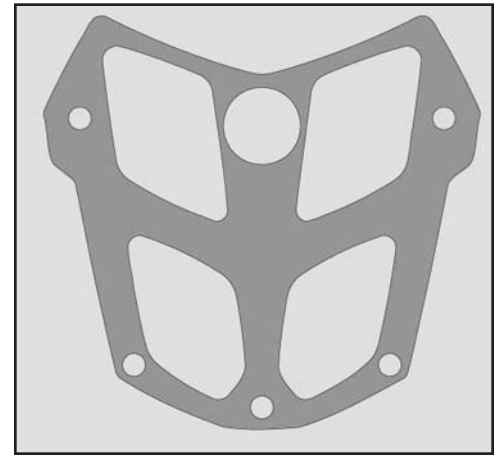

**REAR RACK KIT
Z8911**

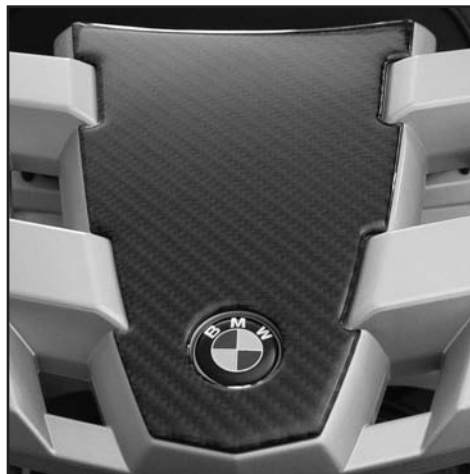

**REAR RACK KIT
Z8941**

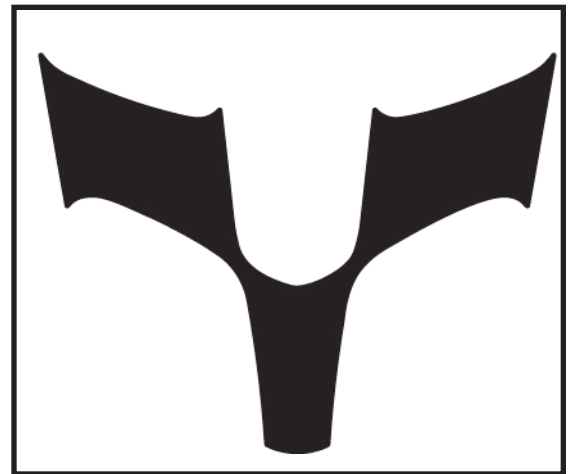

**REAR RACK KIT
Z8912**