




Carbon Fiber Kits: Z8305 for R1200 ST; Z8306 for R1200S; Z8320 for K1200 S and Z8325 for K1200R



Hand Held Hair Dryer, 1500 Watt  
Mild Soap and Water for Cleaning  
Tweezers  
Soft Cloth

**CARBON FIBER KIT CONTENTS:**

Kit No.	Description	Qty.
Z8305 Kit	Gauge Trim	2 piece
	Key Guard / Clamp Trim	3 piece
	Alcohol Pack	2
Z8306 Kit	Gauge Trim	2 piece
	Key Guard / Clamp Trim	2piece
	Alcohol Pack	2
Z8320 Kit	Gauge Trim	1 piece
	Triple Clamp Trim	2 piece
	Upper Tank Trim	1 piece
	Alcohol Pack	3
Z8325 Kit	Gauge Trim	2 piece
	Key Guard / Clamp Trim	2piece
	Alcohol Pack	2

**PREPARATION**

1. Clean the motorcycle's surface where the Carbon Fiber pieces are to be placed with mild soap and water.

**NOTE:** Cleaning is critical. Be sure to remove all wax, cleaners, and protectants (Armor-All). These can contaminate the adhesive causing it to fail.

2. Dry area and clean again with the alcohol wipes. *Do not* apply wax or polish to the area cleaned.

**GENERAL INSTRUCTION**

**It's best to read all general instruction, then proceed to specific points pertaining to each part number on page 2.**

1. Before removing the adhesive mask, familiarize yourself with the fit of the the carbon piece to the area where it will be located.

**CAUTION**

-Do not use a heat gun or open flame to warm the Carbon Fiber piece or the motorcycle, they produce too much heat and may create a fire hazard.  
-Warming temperature is critical for the best performance and adhesion. Installing a warm piece onto a cold surface is not recommended.

2. Warm the motorcycles surface where the piece is to be placed to about 100° F (37° C) (hair dryer).

3. Warm the Carbon Fiber piece to 100° F (37° C) (hair dryer).





4. When everything is warm, carefully remove the masking from the adhesive side of the Carbon Fiber piece. (Do one piece at a time) (tweezers).

5. Position the piece in place.


6. If it is necessary to reposition any piece, warm the piece and slowly peel it from the surface. Be careful not to stretch or over bend the piece.

7. Once the pieces are correctly positioned, firmly but carefully, press the pieces onto the warm surface. While still warm, carefully use a soft cloth to press the piece onto the area until it is completely adhered.

9. Avoid contact for 24 hours, the adhesive on the piece will have set completely after that time and it will be permanently installed.

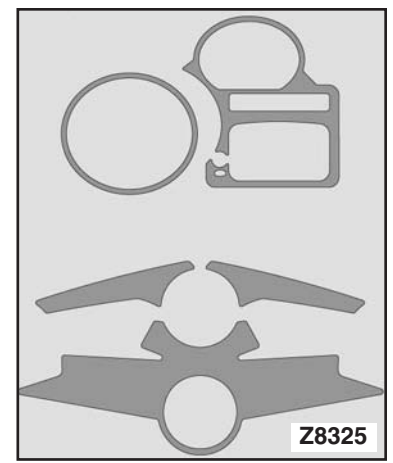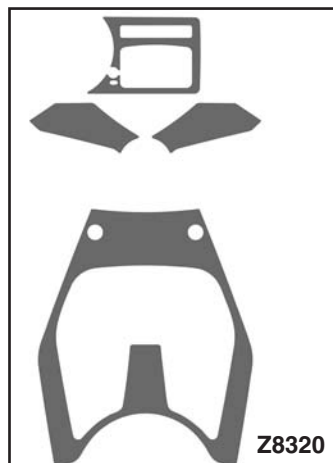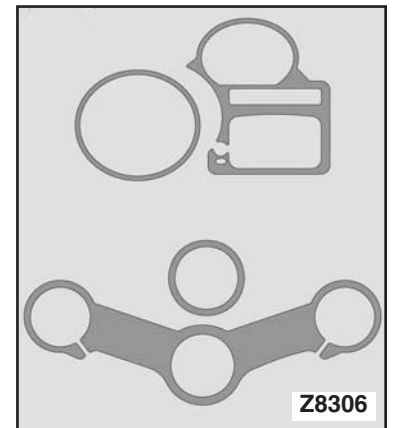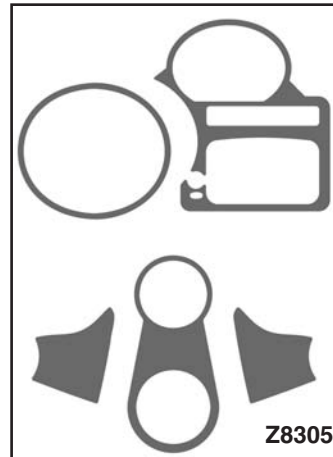

**SPECIFIC POINTS FOR Z8305; Z8306 and Z8325 as shown on a R1200 ST**

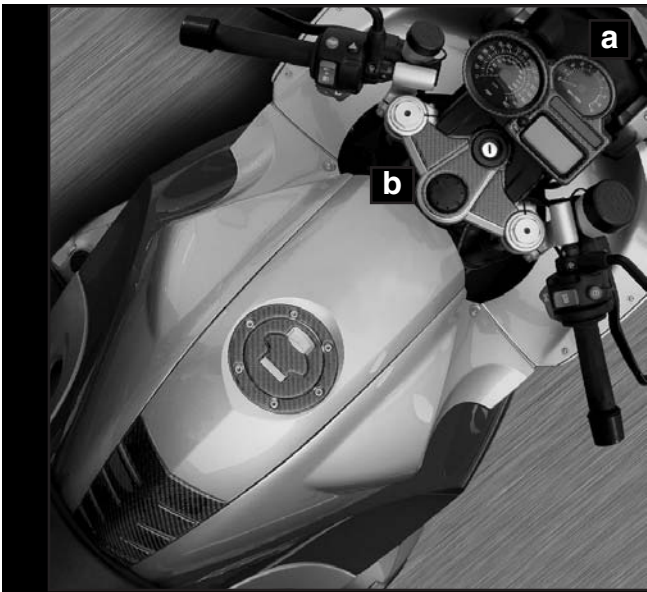

- a. Gauge Trim fits cleanly to edges.
- b. "Test fit" each piece before removing backing paper. Install center piece of Key Guard / Clamp Trim before installing side pieces.

**SPECIFIC POINTS FOR Z8320 K1200 S**



- a. Gauge Trim fits cleanly to edges, note placement of indicator light.
- b. While placing Key Guard / Clamp Trim, align point b. while positioning the curve to fit smoothly to the rondel.
- c. Align and apply as directed in general instruction.



**MAINTENANCE**

Clean and polish the Carbon Fiber Pieces with Turtle Wax® vinyl fabric upholstery cleaner and protector. Spray wax or cleaner on cloth and wipe the carbon fiber covers. Never apply waxes or cleaners directly to the carbon fiber covers.

**ADDITIONAL CARBON PARTS FOR YOUR MOTORCYCLE**

	<b>Tank Protector</b>	<b>Fuel Cap Cover</b>
R1200 ST	Z8503	Z8890
R1200S	Z8503	Z8890
K1200S	Z8504	Z8890
K1200R	Z8505	