

Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windshield for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.

Description:	VStream Windscreen	Model:	2025-Current BMW R1300RS
Part Number:	Z2510, Z2511, Z2512	Installation Time:	15 Min. Difficulty Level: EASY



ATTENTION: Special notes and cautionary measures which can prevent damage to the accessory or vehicle.




NOTE: Tips for facilitation of operation, control and adjustment, as well as maintenance work.

Z2510-12 PARTS LIST

ITEM	PART NO.	DESCRIPTION	QUANTITY
A		VStream Windscreen, 3mm Polycarbonate	1
KIT-Z2507-09			
B	44-447309-000	Rubber Grommets, Pre-Installed	4
BAG#1464			
C	49-490457-000	Washer, Flat, 8mm ID X 14mm OD X 1mm Thick, Stainless Steel	4

TOOLS REQUIRED FOR ASSEMBLY

- 5mm Hex Driver

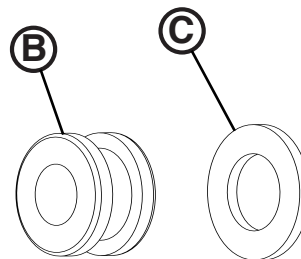

OEM Screws and Top Hats will be reused.
OEM Rubber Grommets will not be reused.

PREPARATION

Place bike securely on side stand, and place a blanket over fender to protect paint.

DISASSEMBLY


Step 01

Remove OEM Wind Deflector using a **5mm hex driver**. Remove the OEM Top Hats from the Deflector.



OEM Screws and Top Hats will be reused.
OEM Rubber Grommets will not be reused.



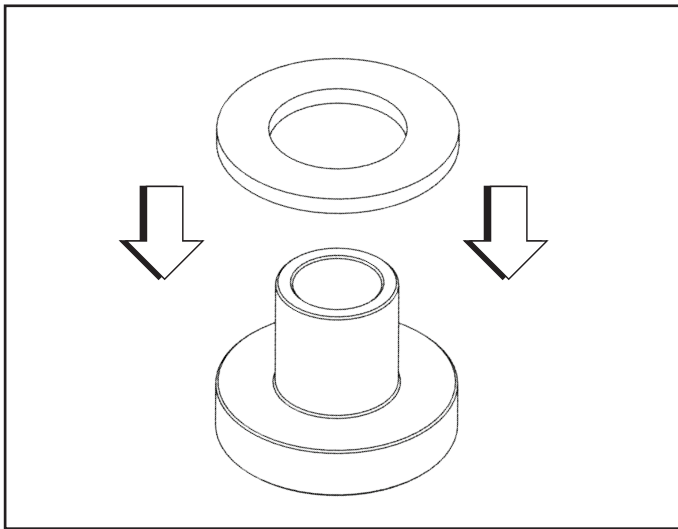

Step 02

INSTALLATION

Step 02

Prepare OEM Top Hats by installing the provided Stainless Steel Washers **(C)** onto the OEM Top Hats that were removed in Step 01.



Step 03

Step 03

Insert the OEM Top Hat & Washer assembly into the pre-installed Rubber Grommets **(B)** on your new VStream Windscreen **(A)**.



Step 04

Step 04

Position your new VStream Windscreen **(A)** over the OEM mounting points and loosely start all OEM screws, removed in Step 01, by hand. Once all screws are started by hand, tighten securely with a **5 mm hex driver**.



Step 05

Step 05

Your VStream installation is complete.

Double-check your work for fit and tightness before riding.

Now go out and enjoy the ride!



CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle Shield Wash™ (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's RainZip® (N1410-01) to keep your windscreen or visor clear in rainy weather.



Register Your Windshield Online at www.nationalcycle.com

National Cycle 3-Year Limited Warranty

National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windscreen. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields.

Visit www.nationalcycle.com for further details, or call 708-343-0400 or e-mail info@nationalcycle.com.

⚠ WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycle's instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.